PREMIER®

MANUAL DE INSTRUCCIONES
HORNO TOSTADOR
ED-0373
120V / 60HZ 600W

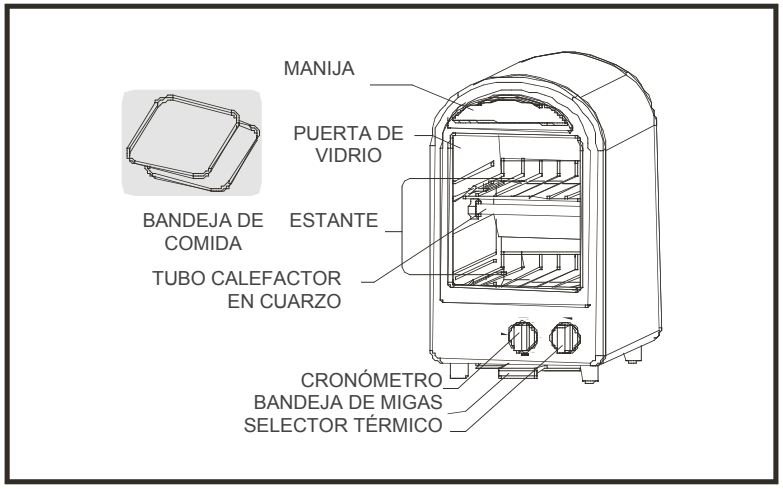

ESTIMADO CLIENTE

Felicitaciones por su compra!
Por favor lea cuidadosamente este manual, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ACCESORIOS

Bandeja de comida X2. Para comida jugosa o aceitosa
Estante X2. Para comida seca y no gotea
Bandeja de migas Para retirar las migas

PRECAUCIONES IMPORTANTES

1. No comparta el tomacorrientes con otras aplicaciones
2. Nunca ubique la unidad cerca o sobre una mesa de madera, alfombra u otros materiales inflamables
3. No coloque nada sobre la unidad
4. No sobrecaliente para no quemar la comida.
5. No deje la unidad desatendida mientras se encuentra en operación
6. No opere la unidad sin comida adentro
7. No use recipientes inflamables como platos plásticos o de papel para evitar incendios.
8. No toque la unidad durante o inmediatamente después de la operación. Evite salpicar el vidrio con agua o líquidos ya que el choque térmico puede quebrarlo.
9. No sumerja en agua o estará expuesto a electrocución
10. Retire todas las etiquetas antes de usar.
11. Antes de usar , opere la unidad durante 15 minutos a máxima temperatura para remover el aceite protector

NOTA

- No permita que los alimentos toquen el elemento calefactor, verifique que la bandeja esté nivelada.
- Solo use la bandeja metálica para cocer alimentos jugosos o aceitosos. Evite quemar los restos de comida directamente.
- Antes de ingresar o retirar los alimentos verifique que el cronometro se encuentre en “0”

OPERACIÓN

1. Verifique que el cronometro se encuentre en “0” y el selector térmico en posición “ OFF”, luego conecte.
2. Seleccione el ajuste térmico deseado y precaliente durante 5 minutos.
3. Coloque la comida en el horno. Use la bandeja metálica para comida jugosa o aceitosa.
4. Ajuste el cronometro a el tiempo de cocción deseado.
5. Para cocer durante menos de 5 minutos, gire el cronometro al punto de sobrepasar los 6 minutos, y luego gire atrás al punto deseado.
6. Para un uso continuo, ajuste el cronometro a un periodo mas corto que el de la primera vez.
7. Cuando suena la campanilla, la cocción ha terminado. Abra la puerta y use el sostenedor para retirar la comida del horno.
8. Para retirar la comida, verifique que el cronometro se encuentre en “0” , luego retire la comida.
9. Desconecte cuando no este en uso, permita que se enfríe completamente antes de moverlo.

LIMPIEZA Y ALMACENAMIENTO

1. Desconecte y permita que se enfríe antes de limpiar.
2. Para limpiar el estante y el horno en si, use un paño suave seco.
3. Para limpiar la bandeja, lávela en agua jabonosa y luego seque . (no use polvo limpiador ni esponjillas)
4. CUando se acumulen migas en el fondo de la unidad, retire la bandeja de migas y límpiela con un

paño. Los residuos de comida pueden reducir la eficiencia de la unidad. Una vez limpia, colóquela y asegúrela nuevamente en su lugar.

Nota:
Para evitar riesgos de electrocución, por favor desconecte cuando no esté en uso y antes de limpiar. Si el cable se daña debe ser reemplazado por personal técnico calificado. Nunca intente reparar ud mismo.

Oven
Instruction Manual
120V /60Hz 600W

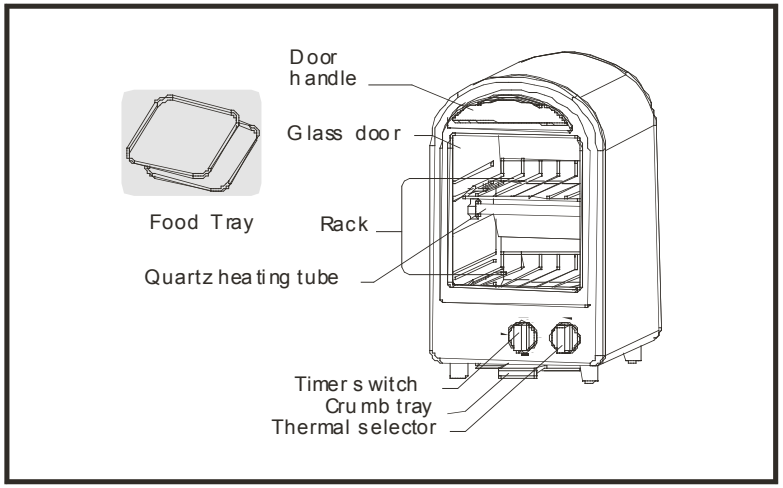

ACCESSORY

Food Tray X2. For oily or juicy food
Rack X2. For dry food that not drip and placing food tray
Crumb Tray. Draw out skillfully to clean off the crumbs

IMPORTANT SAFEGUARDS

1. Do not share the same socket with other electrical appliance.
2. Never place the unit on a wooden table. Carpet or other inflammable surfaces.
3. Do not place anything on top of the unit.
4. Do not over-heat as this will result in-burnt food. Also do not leave the oven unattended while in operation.

5. Never switch on the unit without food inside.
6. Do not place container made of inflammable materials, e. g. plastic and paper plates, into the oven which may cause fire.
7. Do not touch the unit during or immediately after use. Avoid splashing water on the glass door at high temperature which may crack and cause injury.
8. Do not immerse the whole unit into water or any liquid, otherwise an electric leakage or shock may result.
9. Make sure all the labels on the door are peeled off before use.
10. Before first use, please set the unit to highest power and run for 15minutes to bum out the protective oil.

NOTE

- Do not place food directly onto the quartz heating element and make sure the food tray is level.
- While cooking oily and juicy food, the provided metal food tray must be used. Avoid burning the food remains directly.
- Before removing food in and out or the oven, make sure the timer knob is 0.

HOW TO USE

1. Make sure the timer is set to 0 and thermal selector is set to OFF, then plug in.
2. Select the desired thermal setting. Preheat the oven for 5 minutes.
3. Place the food into the toaster oven. Use food tray to whole juicy and oily food.
4. Set the timer knob for the desired cooking time.
5. When cooking time is less than 5minutes, first turn the timer knob past 6 min, mark and turn it back to the desired time.
6. For continuous use of the mini oven, set the timer for a shorter time period than that of the first time.
7. A bell rings when the cooking time is up. Open the glass door and remove the cooked food from the oven with pot holder.
8. When removing food while cooking, first turn the timer knob to 0 till the bell rings. Then remove the food.
9. Unplug the unit after use. Allow the unit to cool sufficiently before moving it.

CLEANING AND STORAGE

1. Unplug and let the unit cool down before cleaning.
2. To clean the rack and the oven itself, wipe with a dry and soft cloth.
3. To clean the tray, wash it while it is immersed in soapy water and then wipe dry. (Do not use cleaning powder or nylon scrubbing brush to clean the tray.)
4. When bread crumbs have accumulated on the bottom of the unit, draw out the crumb tray and clean the inside with a cloth. (Food residues inside the unit can impair the unit s efficiency.) Replace the crumb tray and lock it property.

Note:
To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer of it is service agent.